



1. Remove gimbal ring & lamp from fixture body (needle-nose pliers recommended).



2. Bend back metal tabs securing lamp to gimbal ring.



3. Remove lamp from gimbal ring.



4. Disconnect lamp by loosening screw terminals.



5. Insert new lamp and reconnect screw terminals.



6. Place new lamp back into gimbal ring.



7. Bend metal tabs back into and place to secure lamp to gimbal ring.



8. Replace gimbal ring and lamp back into casing.