
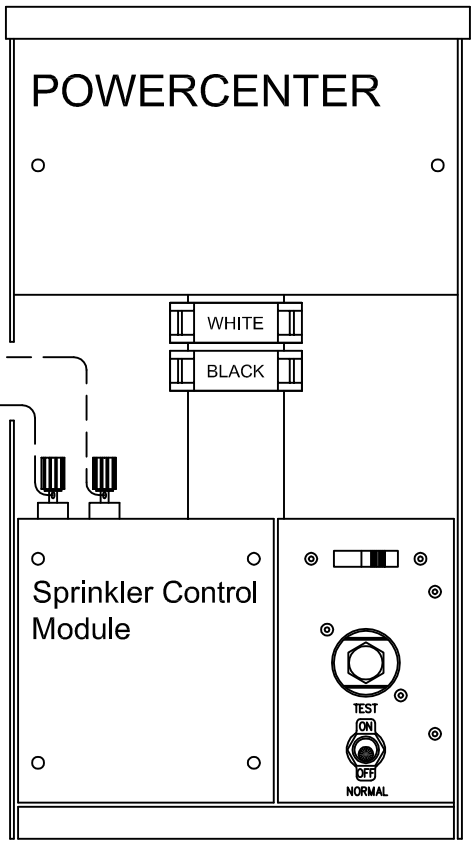


SPRINKLER CONTROL INSTRUCTIONS: T-SS-SC

**SPRINKLER TIMER**

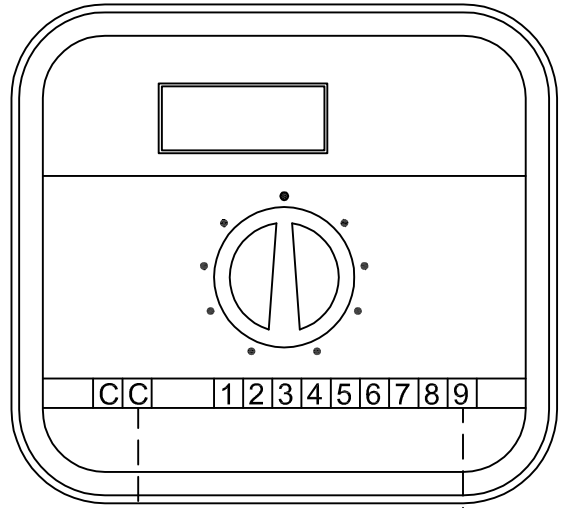

Use the SPRINKLER CONTROL MODULE to control a Nightscaping POWERCENTER from any sprinkler timer.

CONNECTING THE SPRINKLER CONTROL MODULE

- ① Connect POWERCENTER™ with SPRINKLER CONTROL MODULE to an available zone on existing SPRINKLER TIMER, as shown.
- ② The SPRINKLER TIMER needs sufficient zone run time to operate lights (typically 6+ hours)
- ③ The SPRINKLER TIMER should have concurrent run times in order for lights to operate independently from sprinklers.

