

QuickTime^a and a decompressor are needed to see this picture.

Digital Power Switch:

Daylight savings/ Standard time: change instructions.

- 1). Open the white lid covering the control panel on the lower portion of the power switch by lifting up on the bottom of the lid.
- 2). Press the CODE button, (#5), 4 times.
- 3). Press the MIN button, (#8), one time to switch from Ad to Nor (Nor = Standard Time, Ad = Daylight Savings)
- 4). Press any of the outer unlabeled buttons, (#4), to return to the main display. Close the white lid and make sure the display still reads Auto. If not, hold the lid down, (which constantly depresses the #4 buttons), until the display switches from Man to Auto.

